

## Boost Valve Kit

### Part No.

# 89010-01K


- Sleeve
- Valve

**NOTE:** Low Ratio (see chart).

#### Identification Chart

| Part No.  | Small Dia. | Large Dia. | Ratio | Groove |
|-----------|------------|------------|-------|--------|
| 89010-01K | .482"      | .565"      | Low   | No     |
| 89010-02K | .482"      | .583"      | High  | Yes    |

## Toyota/Lexus A130, A131, A140

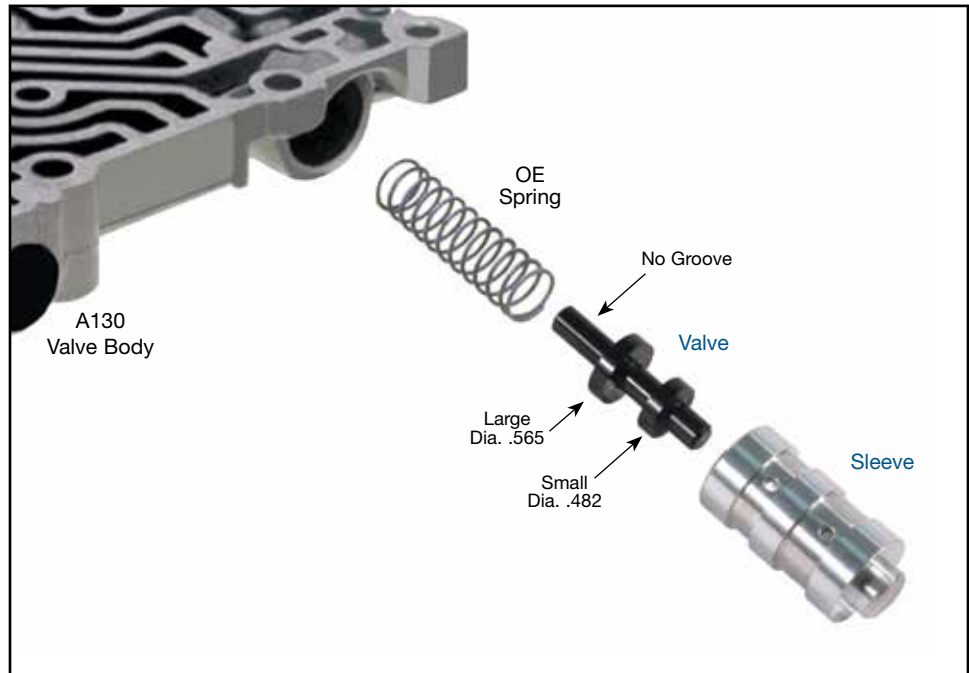

### 1. Disassembly

- Remove and discard OE boost sleeve and valve.
- Remove OE spring and save for reuse.
- Verify the OE boost valve and sleeve ratio by measuring the valve's large spool diameter and refer to chart.

### 2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Reinstall OE spring.
- Install Sonnax boost valve and sleeve.