

## TCC Boost Valve Kit


**Part No.**

**119940-01K**



- Valve
- Sleeve
- Spring

## VW/Audi 01M, 01N, 01P

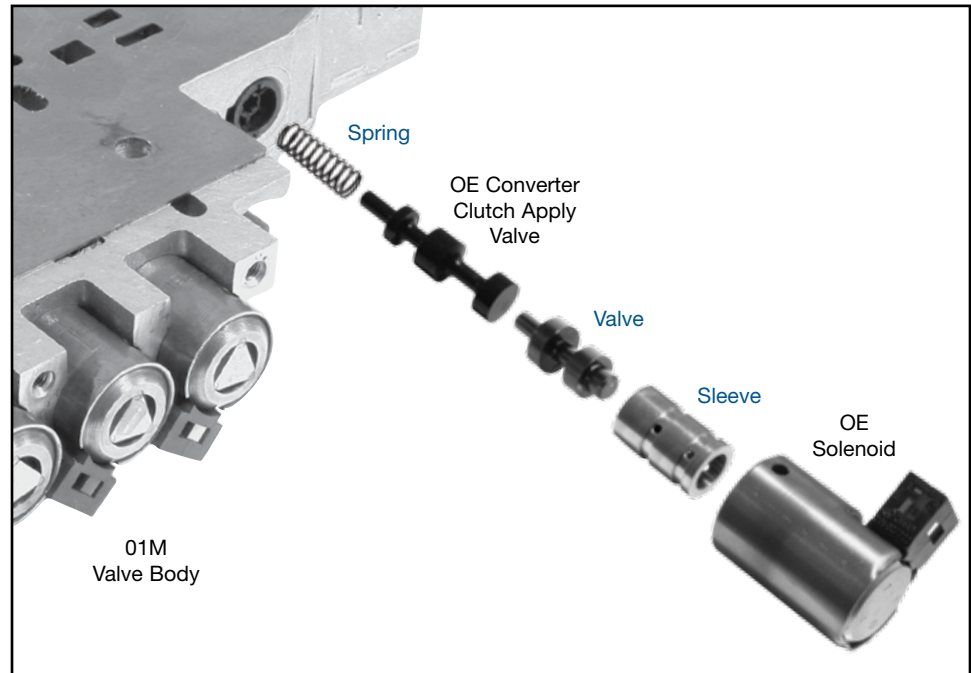

### 1. Disassembly

- Remove all components from TCC boost valve bore.
- Retain OE solenoid and converter clutch apply valve for reuse.
- Discard OE spring, boost valve and sleeve.

### 2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Place Sonnax spring on OE converter clutch apply valve nose and insert into bore nose end first.
- Insert Sonnax boost valve and sleeve assembly.
- Reinstall OE solenoid.