

GM 400


Boost Valve Kit

Part No.

34910-05K

- Valve
- Sleeve

NOTE: Factory Style, No O-Rings.

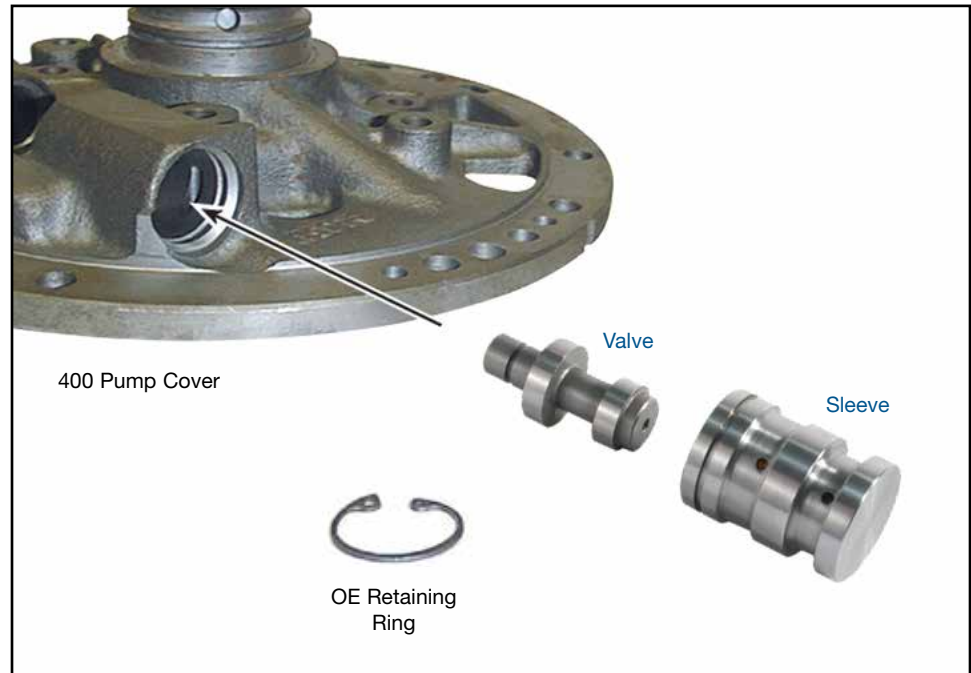

1. Disassembly

- Discard OE boost sleeve and valve.
- Keep OE spring and retaining ring for reuse.

2. Instruction & Assembly

- Lubricate Sonnax valve and sleeve.
- Insert valve into sleeve with long stem facing out as shown.
- Carefully insert Sonnax assembly into pump body with open end toward OE spring.
- Insert only deep enough to reinstall OE retaining ring.